

 


SAFETY

CUTTING TO SIZE


Corner Strips

1. Carefully measure the size of section you need to remove
2. Cut with a steel edge ruler & a very sharp blade
3. Remove section and re-join the two



Wall Panels

 1. Carefully measure the size of section you need to remove
2. Cut with a steel edge ruler & a very sharp blade
3. Remove section and re-join the two halves

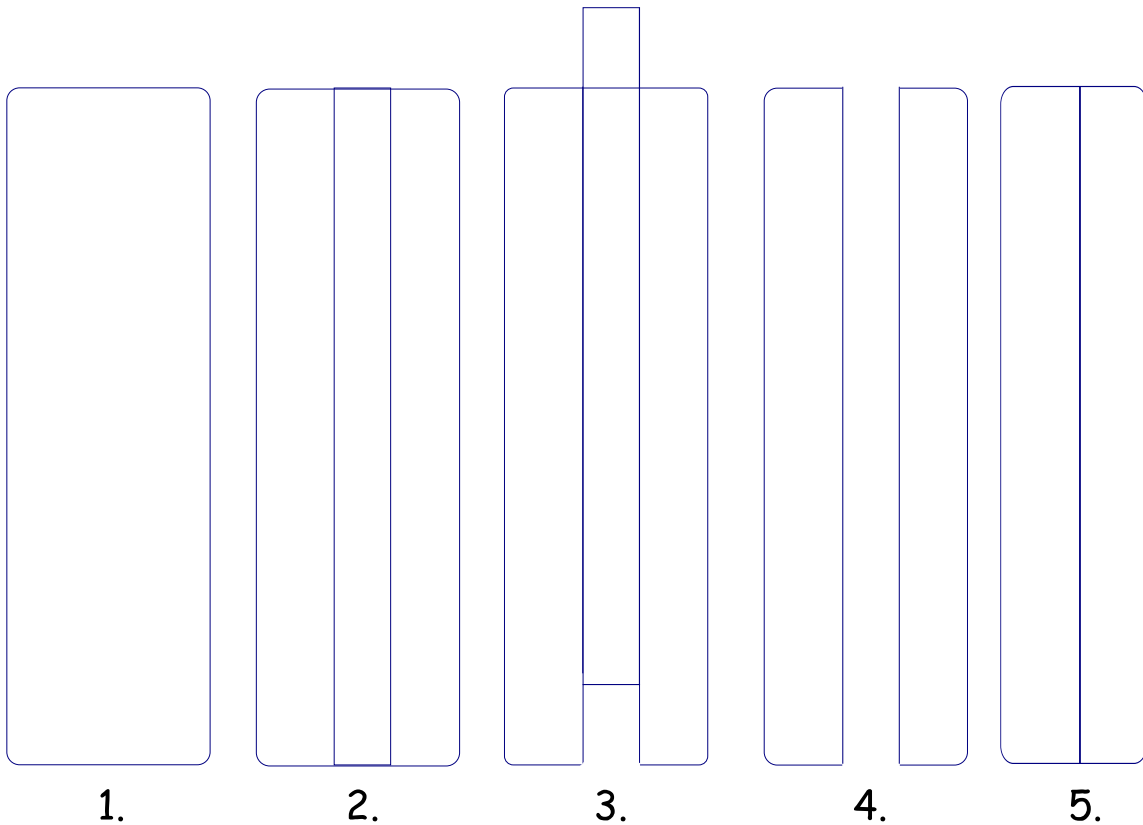

1.

2.

3.

4.

5.

Copyright Boing Safety

136 Walker Street, Atlanta GA 30313

TEL 404-521-9054 ORDER: 800-477-6434 FAX: 404-222-8366

www.boingsafety.com info@boingsafety.com